


Welcome - this is your new access light




Signal light Suction cups Charger Remote control


Commissioning

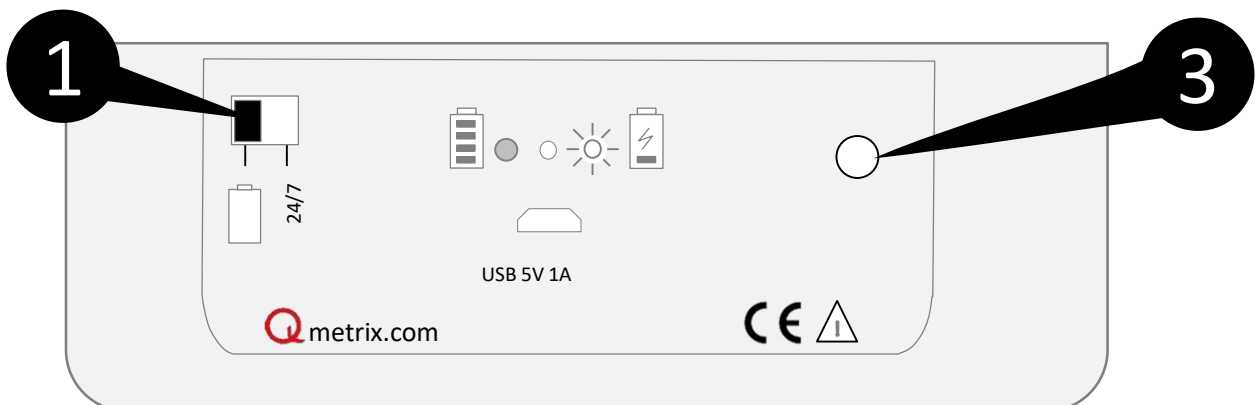


- 1 Switch on battery
- 2 Press remote control
 - 1) Red → Red
 - 2) Green → Green
 - 3) Grey → Off
- 3 Arrow orientation and brightness from red and green: Select colour green, then press button 3 several times

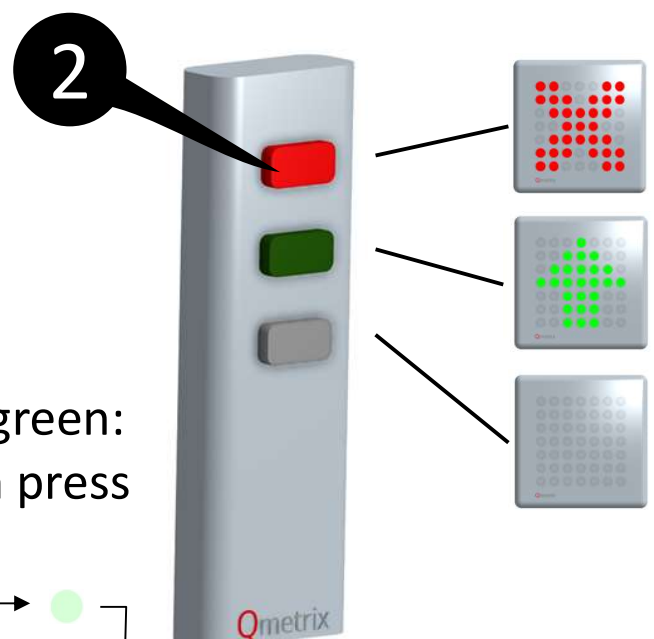



Charging the battery - approx. 8h until full

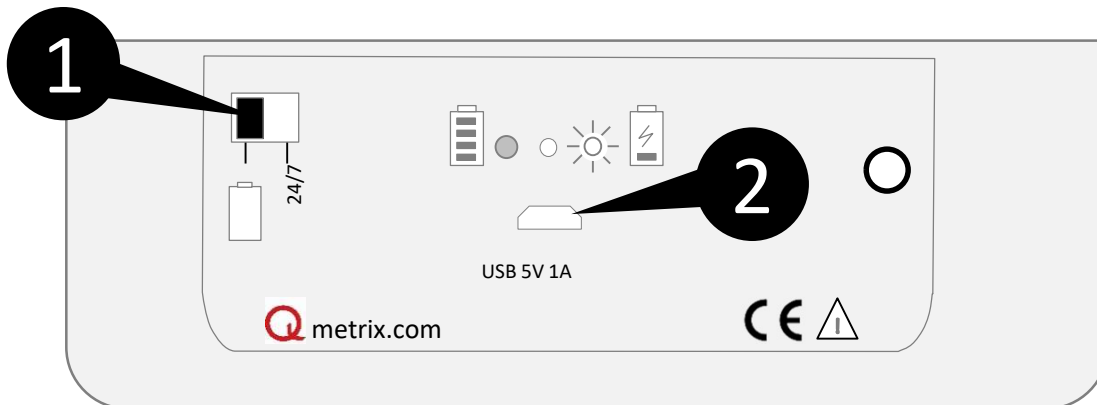

- 1 Make sure that the switch is on the left ( and the signal lamp is not lit.
- 2 Plug in the charger. The red LED starts flashing. When the battery is full, the LED lights up continuously.

Continuous operation (24/7) on the charger

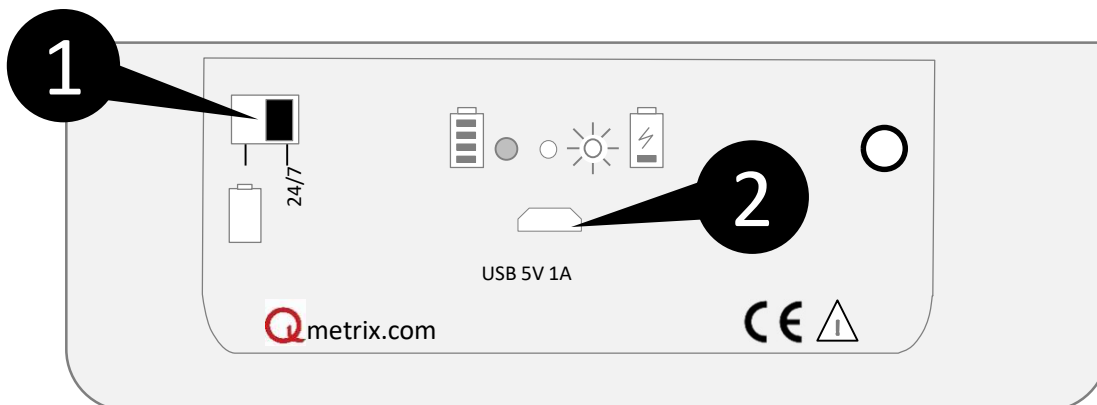

- 1 Switch off battery - switch to the right ()
- 2 Plug in charger

Long time storage

- 1 Switch off the battery. Store at approx. 20 degrees. Recharge once a year to prevent deep discharge.